

Betore Starting Work.

### **AAHA XHOW**

- trom petrol, or gas cylinders. Do not use this edge sander where there is a danger of explosion. It will ignite turnes 1
- and that no-one is near to you or could Make sure that the area is clear and safe
- Keep children and animals away when using this equipment. physical barriers, barrier tape and signs. the edge sander is being used with an exclusion zone around the area where Protect other people from the dust. Set up distract you.
- anyone, other than those directly assisting Work should stop immediately should
- Clear the area of trip hazards such as with the work, enter the exclusion zone.
- rubble, rubbish etc.
- new 196 indim 1 Do not use this sander in the rain or where
- objects that may be damaged, or difficult to amount of dust - cover any surfaces Sanding certain materials makes a large -2

## *SROTAR340*

- should be worn whenever you use this machine. Particular jobs or environments equipment (PPE) are the minimum that The following items of personal protective 11
- may require a higher level of protection.
- mask (with a minimum of EN149:2001FFP3 protection) when you are in contact with You will need to wear an appropriate du .s
- material that causes dust.
- .(2764/078128). You must wear safety boots (EN345 or 31
- Anybody who is working near to you will You must wear industrial quality gloves. .4
- need to wear identical personal -2

protective equipment.

PSM

v<sup>.</sup>032017

vesociation ⊨urope

**3YT TEB Iludilos** The Crescent Birmingham Business Park nuou sinegen uce

:lism3 :euoudeie

must know now to stop it.

ti dots of won wond tsum

two hands while working.

titted, or a blue industrial plug.

44 (0) 121 380 4600

44 (0) 121 333 4109

ail@hae.org.uk ww.hae.org.uk

perore you switch the floor sander on, you

perore you switch the edge sander on, you

Check on how the on/off switch operates -

you start work, and wear gloves to keep

be hazardous. Warm your hands up before

Vibration from using this edge sander can

Always hold the edge sander correctly with

will have either a normal square pin plug

designed to run directly from 230v mains

yourself when moving it about - it may be

been supplied, take care not to injure

230v supply. If a portable transformer has

to power the machine from a normal mains

bιολιαεα s portable transformer it you need

ava 110v supply. The hire company will have

industrial plug titted are designed to run off

Edge sanders with a cylindrical yellow

matches your supply. Do not try to force

Check that the plug on your edge sander

not use the edge sander - contact the hire

ob ,begemeb brund is found damaged, do

Check your machine, cables, plugs and

connections or improvise them.

eavier than you think. Edge sanders

your nangs warm while you are working.

Check on how the on/off switch operates

ry effort has been made by HAE/EHA to ensure that the information given in this document and supporting mat is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

# The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment. It is important to read all of this leaflet **BEFORE you use the Edge Sander**

**Edge Sander** 

Electricity is dangerous and must always be used with great 1. care

0411 Safety Guidance

- This edge sander is designed to sand areas of floor not accessible to a larger floor sander. You must use the appropriate sanding disc. It is not designed for any other nurnose
- З. The action of this edge sander can cause injury or damage if the
- machine is not used in a careful and controlled way. 4 If you have not used an edge sander before, familiarise yourself with the machine on some
- straightforward work before you start on the main task
- Plan your work and think ahead to make sure you will always be working safely.
- You must have at least the following items of personal protective equipment: goggles: 6 EN166 or BS2092: dust mask - a minimum of EN149 FFP3(s) protection: Safety boots to EN345 or BS1870/4972; industrial quality gloves; residual-current device (RCD) if using a 230 volt (mains) supply
- 7.
  - A personal first-aid kit should be available.
- 8 This edge sander must not be used by minors, or by anyone under the influence of drugs
- 9 This edge sander is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.
- Although edge sanders are designed for one person operation you should always be





·G

 
·t

3.

.s

.vinpany.

EDGE SANDER

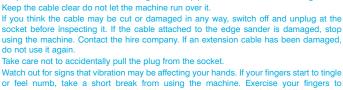

Tilt the edge sander onto its back edge before switching it on.

still, it may cause grooves in the floor.

machine and may cause grooves in the floor.

- 9.
- 10 Watch out for signs that vibration may be affecting your hands. If your fingers start to tingle or feel numb, take a short break from using the machine. Exercise your fingers to encourage blood circulation. Ask the hire company for a copy of the HAE leaflet no. 2150 - Hand-arm vibration or visit www.hse.gov.uk/vibration

For guidance on managing

construction health risks go to

www.hse.gov.uk/construction

Using the Edge Sander

Let the edge sander run up to full speed before lowering it carefully onto the surface. Be prepared for the reactive force when the sanding disc contacts the edge surface.

Keep the edge sander moving across the floor all the time it is running, do not let it remain

Apply only moderate pressure to the machine. Any extra pressure will overload the

Keep the sander clear of central heating and other pipes at floor level - it can damage them.

Wear your protective equipment including ear defenders, dust mask and goggles.

PSM Plant & Tool H

- To help prevent vibration affecting your hands, operate the machine for shorter periods. Keep your hands warm - wearing gloves may help do this.
- 12. Tilt the edge sander off the floor surface before switching off and wait for the disc to stop
- completely before you put the machine down. 13. Make sure that any ventilation slots in the edge sander do not get blocked with sawdust.
- 14. Remember to empty the dust bag when it is half full or when you stop work: but do not
- empty the sawdust onto a fire.
- Switch off and remove the plug from the socket before leaving the edge sander 15. unattended
- If your equipment does not work properly do not attempt to repair it. Contact the hire 16. company.
- You may want to read this leaflet again. Please keep it until you finish work. 17.



mingham Bus lihull B37 7YE

1. 2

3.

4.

5.

6.

7.

8.

©Copyright Hire Association Europe April 2011

### Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

extension cable > edge sander. 230v: Wall socket > RCD > any necessary

necessary extension cable > edge sander.

110V: Wall socket > transformer >

:lisumary:

connections are dry and safe.

- 5. Make sure that any extension cable
- - could catch fire.

- run over it. Unroll it tully or it will overheat and be trapped, and places where vehicles might
- edges, doorways or windows where it might 4. Lay it out carefully avoiding liquids, sharp
- The RCD.
- than 50 metres (160 teet). Plug it directly into a suitably rated heavy duty one, not longer
- suy special instructions, you should only use company. If the hire company has not given αυλ special instructions given by the nite
- 3. If you need to use an extension cable, tollow

s working each time you use it. Reset the

2. Use the "TEST" button to check that the RCD

you against electric shock if the cable or

machine into the RCD. This will help to protect

directly in to the 230volt socket. Plug your

1. Use a residual current device (RCD) plugged

d. Make sure that any extension cable

vehicles might run over it. Unroll it fully or it will

where it might be trapped, and places where liquids, sharp edges, doorways or windows

3. Lay the extension cable out carefully avoiding

machine gets damaged.

(золяве рій ор веле рела)

connections are dry and sate.

overneat and could catch fire.

230 VOLT MACHINES

- Do not empty the sawdust bag onto a fire -it may explode. vith it. RCD according to the instructions supplied
  - ne sanding sneet. Close and secure the covers after changing

sanding disc recommended by the hire

Make sure you use the correct type of

socket before making adjustments or changing the sanding disc.

Switch off and remove the plug from the

**DAATSUG GNA DZIG DNIGNAS** 

- sawdust is highly flammable. Empty the dust bag when it is half full or when you stop work. Remember the

between the transformer and the machine.

cable, not longer than 50 metres (160 feet). You must only use an extension cable

any special instructions, you should only use a suitably rated heavy duty 110v extension

company. If the hire company has not given

any special instructions given by the

socket. Do not use any 230v extension cables.

2. If you need to use an extension able, follow

1. If you are using a portable transformer, plug the transformer directly into the 230 volt

Read the instructions below for your machine.

fitted. 230v machines will have either a norm

square pin piug intea, or a biue industrial piug.

110v machines will have a yellow industrial plug

Your machine will only operate on one voltage: it

110 VOLT MACHINES (YELLOW PLUG)

will be 110v or 230v.

company.

- 5

**ELECTRICAL SAFETY**