



For guidance on managing construction health risks go to

www.hse.gov.uk/construction





ELECTRICAL SAFETY

- Do not touch any switches, plugs, or sockets unless hands are dry.
- Make sure the pressure washer is switched off before plugging it into the
- Do not use an extension cable unless it is necessary to do so. Using extension hoses is a much safer way of working at a distance from the electricity supply.
- If an extension cable is needed, it must be the same heavy duty specification as the cable fitted to the pressure washer, with a splash proof socket.

110 VOLT EQUIPMENT (YELLOW PLUG)

- 1. If using a portable transformer, plug the transformer directly into the 230 volt socket. Do not use any 230v extension cables
- If an extension cable is needed, follow any special instructions given by the hire company. If the hire company have not given any special instructions, only a suitable rated heavy duty 110v cable should be used with a splash proof socket, not longer than 50 metres (160 feet). The extension cable must only be used between the transformer and the equipment.

- 3. The extension cable should be laid out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and where vehicles might run over it. It should be unrolled fully or it will overheat and could catch fire.
- Extension cable connections should be dry and safe.

230 VOLT EQUIPMENT (SQUARE PIN OR BLUE PLUG)

- 1. Use a residual current device (rcd) plugged directly into the 230 volt socket Plug the equipment into the rcd. This will help to protect against electric shock if the cable or equipment get damaged.
- Use the 'TEST' button to check that the rcd is working each time it is used. Reset the rcd according to the instructions supplied with it.
- If an extension cable is needed, follow anv special instructions given by the hire company. If the hire company have not given any special instructions, only a suitable rated heavy duty extension cable should be used with a splash-proof socket, not longer than 50 metres (160 feet). It should be plugged directly into the rcd.

Steam Cleaner

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read this entire leaflet BEFORE using the Steam Cleaner

0810 Safety Guidance

- Electricity is dangerous and must always be used with great care
- Water and electricity can make a hazardous combination Keep water away from electrical parts.
- This pressure washer is designed for high-pressure hot water
- The action of this pressure washer can cause injury or damage if the equipment is not used in a careful and controlled way.
- If the operator has not used the pressure washer before, they should familiarise themselves with how the equipment works before starting on the main task.
- The work should be thought out and planned ahead to ensure that it is carried out safely
- The following items of personal protective equipment must be worn as a minimum: Impact resistant visor or goggles: EN166 - B or BS2092 grade 1; Ear muffs or plugs giving protection for levels up to 88 dB(A); Waterproof overalls; Waterproof boots; Gloves; Rcd if using a 230 volt (mains) supply.
- This equipment must not be used by minors, or by anyone under the influence of drugs or
- This pressure washer is designed for operation by an able-bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.

have the force of law and only the courts can authoritatively interpret the law.







2450 Regents Court



Please keep this leaflet safely as it may be required for future reference





www.hae.org.uk











is accurate and not misleading. HAE/EHA cannot accept responsibility for any lt to have arisen from the use of any such document/material. Only Acts of Parliamen







©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

(continued overleat...)

oberate. bressure too low or the burner will not water pressure. Do not reduce the required, operate the valve to reduce the 6. If hotter water or saturated steam is trigger is released.

must extinguish itself when the lance the lance trigger is pressed. The burner 2. Note the burner must only operate when the lance trigger.

Intuitive burner switch on, then operate water is under pressure. the lance trigger a few times. Ensure the

3. Switch on the water pump and operate be damaged if the tank is empty. Check the fuel level. The fuel pump may

understood. 1. Make sure the burner controls are

STARTING THE BURNER

move the fuel can to a safe cool place. Put all fuel caps back on properly, and be changed immediately.

e. If any fuel is spilled on clothes, they must it up or cover it with soil, and move away. 5. If any fuel is spilled on the ground, wipe sny fuel soaked cloth carefully.

4. Wipe any fuel off the washer. Dispose of

Use a funnel. Do not spill any fuel. hire company. Do not use petrol. 2. Use only the fuel recommended by the 1. No smoking.

REFUELLING THE BURNER

recommended by the hire company.

Only use the detergent .meni tollow the instructions supplied with When using chemicals or detergents, switching on and off.

sufficient, the water heater will keep per minute). If the water supply is not the machine operational (up to 12 litres enbby, with sufficient capacity to keep 1. Connect the steam cleaner to a water

YJ99US RETAW

control it and switch it off safely. washer on, it must be known how to Before switching the understood. 10. Make sure that all of the controls are freezes, it may be damaged.

Protect this machine from frost. If it macnine. connections get dirly when setting up the

8. Make sure that none of the hose connections are tight and firm.

7. Make sure that all the pressure hose capies it possible.

extension hoses instead of extension long extension cables. Always use the electricity supply, without having to use allow you to work further away from the anbblied by the hire company. These 6. Extension hoses may have been run over it.

no kinks, away from where vehicles may

machine. Ensure it is laid out safely with Use only the hose supplied with the fifted, or a blue industrial plug.

44 (0) 121 333 4109 44 (0) 121 380 4600

will nave eitner a normal square pin plug designed to run directly from 230v mains be heavier than it appears. Equipment take care when moving it about - it may portable transformer has been supplied, normal 230 volt mains supply. It a if the equipment is to be powered from a will have provided a portable transformer a special 110v supply. The hire company mousinal plug ilited is designed to run off Equipment with a cylindrical yellow

spould not be forced or improvised. matches the supply. Connections Check that the plug on the equipment

hot water flows through it. insulation and protects hands when the Cueck fust fue not water lance provides

washer - contact the hire company. damaged, do not use the pressure equipment. If anything is found to be bings, nign pressure water noses and all 1. Check the pressure washer, capies,

PRESSURE WASHER

wear personal protective equipment. Puyone working nearby will also need to







BAY 788 Iludilos The Crescent Birmingham Business Park noo sinegen uch



suonia be worn. 4. Waterproof overalls, boots and gloves

10r tris ievei as a minimum snouid de

units or plugs giving hearing protection levels up to 88 dB(A) - appropriate ear This equipment is likely to cause noise when working with this machine.

De Morn (EN 166 - B or BS2092 grade 1) Impact resistant goggles or a visor must require a higher level of protection.

Particular jobs or environments may this hot water pressure washer. minimum that must be worn when using protective equipment (ppe) are the 1. The following items of personal

SHOTARIANO

ejectricity supply socket. danger of water being sprayed onto the

Set up the work area so that there is no available for the waste water.

Make sure that good drainage is sbray. Use a wash bay, or erect barriers. Protect others from the noise and water cause a distraction.

and that no-one is nearby who could Make sure that the area is clear and sate

rain or where electrical parts might get Do not use this pressure washer in the

ignite fumes from petrol, or gas there is a danger of explosion. It will Do not use this pressure washer where

WORK AREA

