 




Redistributed under licence from HAE by P S M Plant & Tool Hire Centres Ltd. Licence expires on 31/12/2021

230 VOLT MACHINES

- (SQUARE PIN OR BLUE PLUG) (continued)
2. Use the "TEST" button to check that the rcd is working each time you use it.
3. If you need an extension cable, follow any special instructions given by the hire company.



USING THE COMPRESSOR

- 1. Wear your protective equipment, including ear defenders and goggles.
2. Check that any air lubrication container is topped up with the recommended oil.
3. When you have set up the compressor, switch on and check that everything operates properly.

Please keep this leaflet safely as it may be required for future reference

- 4. Ensure there are no apparent air leaks.
5. At intervals, while working, stop and check for air leaks or other possible faults.
6. Stop work if someone approaches you.
7. You must stop the compressor and release the air pressure before you disconnect any part of your equipment.

Electric Compressor

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read all of this leaflet BEFORE you use the Compressor

- 1. Plan your work and think ahead to make sure you will always be working safely.
2. Compressed air is hazardous and must be used carefully.
3. Electricity is hazardous and must always be used with great care.



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Soliuhull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading.

Any unauthorised reproduction - manually or electronically - is STRICTLY prohibited

Telephone: 44 (0) 121 380 4600
Email: mail@hae.org.uk
Fax: 44 (0) 121 333 4109
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Soliuhull B37 7YE

- 1. If you are using a portable transformer fitted. 230V machines will have either a normal voltage: it will be 110v or 230v.
2. If you need to use an extension cable, follow any special instructions given by the hire company.
3. Lay the extension cable out carefully avoiding liquids, sharp edges, doorways and places where vehicles might run over.

- 1. Do not use compressed air in any flame heating or cutting equipment that normally uses oxygen.
2. Do not use it to blow out dust and debris from portable tools, the airborne dust particles could be hazardous to health.

- 1. Do not use the compressor to supply any form of breathing equipment or to supplement or replace a ventilation system.
2. Do not use it to blow out dust and debris from portable tools, the airborne dust particles could be hazardous to health.
3. Machines with a cylindrical yellow industrial plug fitted are designed to run off a special 100v supply.