



Description: Electric or Petrol Floor Planer



This electric or petrol floor planer is for use on concrete floor slabs to smooth the surface, flatten uneven surfaces or remove sealants etc. Cleaning and Texturing concrete and asphalt. Removal of paint, rust, grease, ice deposits, line markings, and concrete laitance. Also removal of roof chippings. Dust Extraction option available.

HOW TO USE A CONCRETE SCARIFIER LIKE A PRO

Concrete Scarifying is a fairly basic operation, but like most construction-related operations, you can run into difficulties if you don't know what you're doing. There are some basic things that the pros do to ensure maximum scarifier productivity and profit. In this blog, we will highlight tips from our experts to help those who are new to scarifying become more effective and productive with their equipment.

DON'T ATTEMPT TO REMOVE TOO MUCH PER PASS

This is one of the most important things to pay attention to and something that many beginners don't realize. Scarifiers are set up to only remove a certain amount of concrete per pass. This amount will vary depending on the machine and motor size, as well as the concrete hardness. Regardless of the variables, if you try to force the machine to remove more than it's designed to, you could end up doing a few things...

You could damage your tooling and/or the cage of the machine.

The internal machine parts can also get damages.

Productivity will suffer in the long run because you'll keep running into problems that will slow you down.

If you notice you are forcing the machine through the cuts, try taking less off at a time and do multiple passes. It might even be faster, even if it doesn't feel like it at the time. You will save a lot of money in fixing tooling and potentially even your machine.