



OR:

- Remove the jacking screw plate, leaving the threaded support as a stop
- Slide a prop in and along the length of the needle until in correct position.



For all assembly methods:

- Ensure the props are vertical and resting on a suitable surface before extending to take up the slack.
- Ensure that the props can not come into collision with equipment, particularly mobile equipment on site.
- All supports and supporting ground must be checked by qualified personnel before use. Prop Pal accepts no responsibility for the incorrect installation or use of this product.

- Remove the wall and insert the beam in line with best practice.
- Once the beam is in place, and the masonry has been made good, the props can be removed and the needles retracted.

MAINTENANCE

The Prop Pal needle should be inspected before and after each use. Inspections should ensure fastenings are tight and all parts are present. While cosmetic damage is acceptable, do not use the equipment if any structural damage is found. Additionally, once erected, the needle, props and prop supports should be checked each day to ensure they safe and secure.

Please keep this leaflet safely as it may be required for future reference



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Soliuhll B37 7YE


Telephone: 44 (0) 121 380 4600
Email: mail@hae.org.uk
website: www.hae.org.uk

Prop Pal Needle

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read all of this leaflet BEFORE you use the Prop Pal Needle

- Seek expert advice on the loads, number of needles required and their spacing.
- Hard hat must be worn.
- Gloves must be worn.
- Do not exceed 1050kg per needle.
- Two person operation.

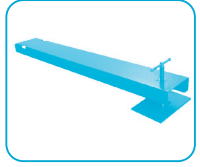

PRODUCT FEATURES

- 1050kg safe working load.
- Needle cross-section of 170mmx60mm is smaller than a brick, allowing easy insertion.
- Length of 1200mm, allows good access for installing steel beam.
- Manufactured from durable S275 steel.
- Jacking screw plate can be attached to allow needle to be fixed to floor boards, providing greater security for supporting walls above floor chamber.
- Lightweight: 18kg.
- UK manufactured.

INTENDED APPLICATIONS

The Prop Pal needle is intended for applications where wide spans of wall require support, while steel beams are being inserted and hidden in the ceiling void. The system can be configured for ceiling joists running either parallel or perpendicular to the wall.



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

Telephone: 44 (0) 121 380 4600
Email: mail@hae.org.uk
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Soliuhll B37 7YE




CONTINUED OVERLEAF...




- Position the jacking screw plate so that the short side is parallel with the length of the needle.
- Wind the screw fully in so that the plate is tight against the needle.
- Screw the two prop retention brackets onto the jacking screw plate using the provided fastenings.
- Props may now be positioned and retained within the brackets.


TRADITIONAL ASSEMBLY METHOD
Sometimes it may be advantageous to use the Prop Pal Needle in the traditional way, i.e. by supporting using 2x builders props.

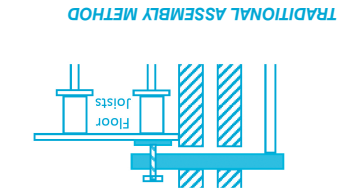


- Secure inside end of the needle to the floor boards using the jacking screw plate OR support using a prop.
- Support the outside end of the needle using a prop using best industry practice.

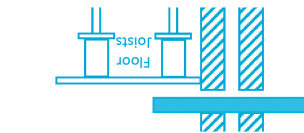

- Create holes in walls and insert needle so end is in line with the jost and its prop.

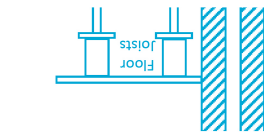

- Support the jost with a prop using best practice.

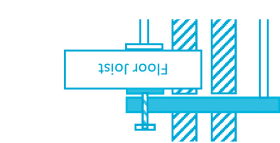


- Secure inside end of the needle to the floor boards using the jacking screw plate OR support using a prop.



Before Starting Work...

Useful Reference Points • www.hae.org.uk/businessguard

- Support the outside end of the needle using a prop using best industry practice.

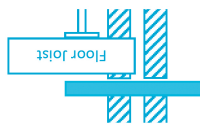

- Create holes in walls and insert needle in line with the jost.



- Support the jost with a prop using best practice.

- Secure inside end of the needle to the floor boards using the jacking screw plate OR support using a prop.



- Seek advice from a structural engineer about how many Prop Pal needles are required and their spacing. Do not space more than 900mm apart.
- Ensure the wall is free from cracks or other damage which could affect its stability when supported.
- Identify whether the ceiling joists are parallel or perpendicular to the wall.
- Ensure the ground supporting the props is suitable. This includes being level, stable and able to bear the load.
- Ensure the ground surrounding the props is made secure against degradation by water during the life of the falswork.
- Note the position of services (particularly underground services in the region of the props).
- Ensure props to be used are jacking and of a suitable safe working load.
- All supports and supporting ground must be checked by qualified personnel before use. Prop Pal accepts no responsibility for the incorrect installation or use of this product.
- Inspect the Prop Pal Needle for defects, ensuring all fastenings are tight.
- Risk assess and plan the insertion of the needles, demolition of wall and insertion of beam. Ensure those on site are familiar with the plan.

INSTRUCTIONS FOR USE

Before Use: