


Safesite Mobile Man Anchor and Rope Grab Operation

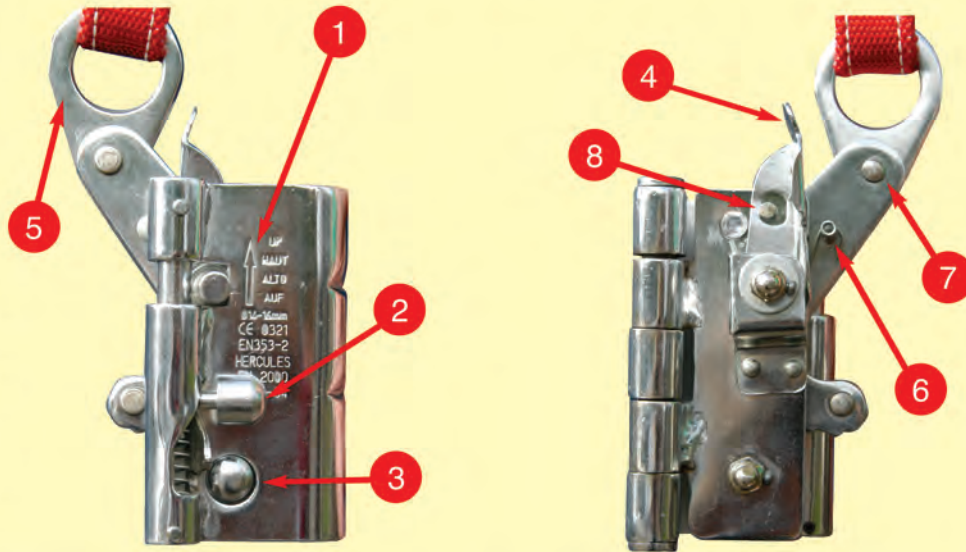

The rope grab has to be opened to position the rope correctly. Open the rope grab device as follows:-

Pull lever **2** down and push fully into the opening to disengage the pressure pin **3**. The device will now open. (Figures A, B & C)

Note:- Ensure the rope grab is attached to the rope with arrow **1** pointing towards the Mobile Man Anchor.

Place rope in the device, ensuring arrow **1** is still pointing towards the Mobile Man Anchor. Close the device and it will automatically lock. (The Lever will return to its original position). Check that the device slides freely on the rope when the eyelet **5** is pulled downwards. (Figures D, E & F)

Attach the end of the rope to the Safesite Mobile Man Anchor spring/shock absorber using an EN 362 connector. (Figure G)

The device can be used in either AUTOMATIC mode for use for vertical access (ladder) or MANUAL mode, when using along horizontal surfaces or inclined planes (roof).

MANUAL mode is the recommended option when using in conjunction with the Safesite Mobile Man Anchor on flat or inclined roofs.

When using in MANUAL mode, the selector **4** is down. Remove selector **4** from the securing pin **8** and bring it to rest against the end stop **6**. This will ensure that it can only slide along the rope by manually operating the pincher arm **7**. (Figures H & I)

In AUTOMATIC mode, selector **4** is up. In this position the device follows the user as they move upwards or downwards and, in the case of a fall, instantly locks on the rope. (Figure J).



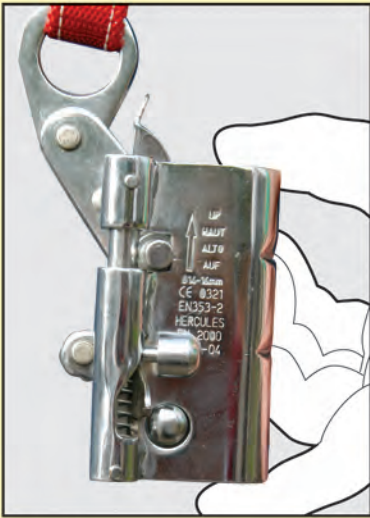


Figure A



Figure B

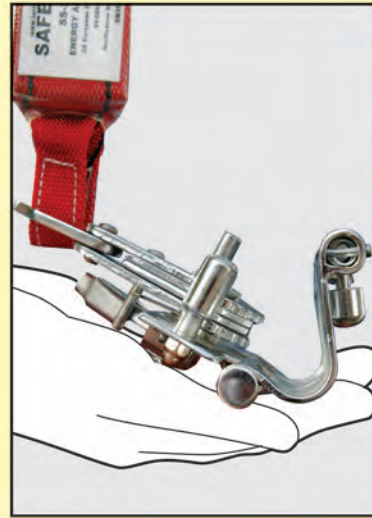


Figure C



Figure D

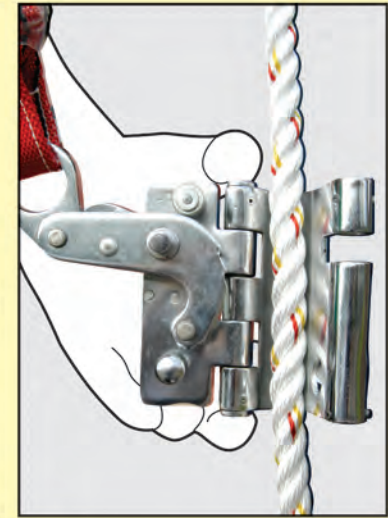


Figure E



Figure F

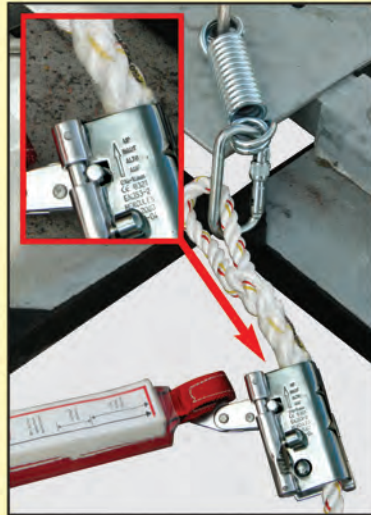


Figure G

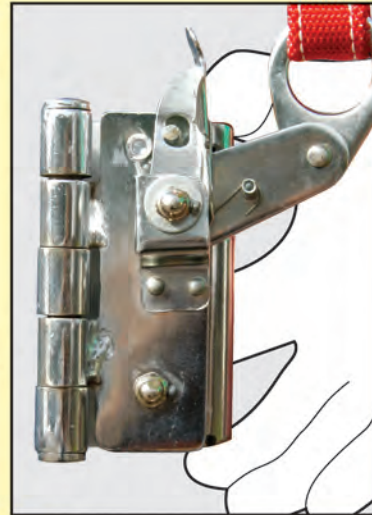


Figure H

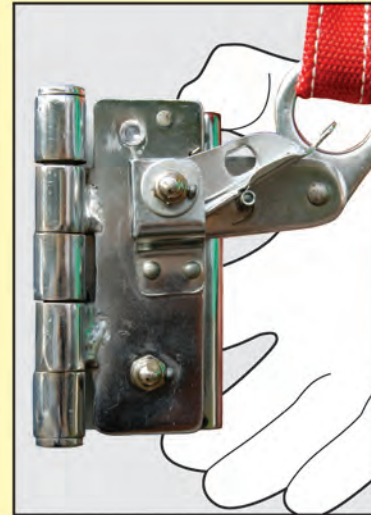


Figure I

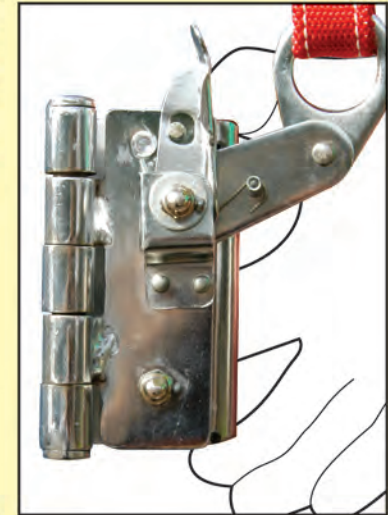


Figure J